

Important: Read all instructions prior to installation.

MiLight LED RGB+Tunable White Remote

Included Parts

- 1 - Remote Control
- 1 - Wall Mount Kit

Specifications

RGB CCT-MZ8-RF	
Radio Frequency	2.4 GHz
Battery Type	AAA x 2

Safety and Notes

- For indoor use only
- White color temperature can not be adjusted unless White LED Selection mode is active.

Setup Instructions

Install two AAA batteries (not included) into wireless remote.
Note: Wireless remote operates using radio frequency and has 100 ft. (30 m) range.

Pairing Remote Control to Light

Pairing a Light

1. Make certain light is powered off.
2. Apply power. Within 3 seconds, press one of the eight Zone On (I) buttons three times quickly until light begins flashing. Light will flash 3 times if successfully paired to selected zone.

Note: If encountering issues when pairing, instead try continually pressing the desired Zone On (I) button repeatedly from before when power is applied to the controller until a few seconds after.

Activating and Controlling a Specific Zone


To activate a specific zone, press Zone On (I) button for desired zone. Zone is now active and remote commands will only affect lights paired to that zone.

Unpairing a Light

1. Make certain light is powered off.
2. Apply power. Within 3 seconds, press the associated Zone On (I) button five times quickly until light begins flashing. Light will flash 10 times if successfully unpaired.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

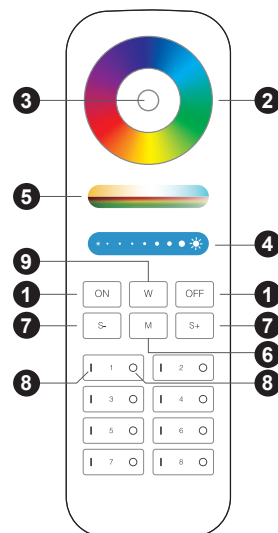

Control Features

1. Master On/Off

Acts as a master On (-)/Off (O) control for all linked RGBW and RGB+CCT lights. Also activates the Master function, which allows remote to control lights of all zones. If a zone is currently active, pressing Master On (-) button restores Master function to the remote.

2. Color Selection Ring

Directly selects color along a circular spectrum. Press W button to changes to a steady bright white.

3. Selection LED Indicator

Flashes once to indicate when a command has been selected.

4. Brightness Touch Slider - Increase/Decrease

Increases (right side) or decreases (left side) the brightness level. Changing active mode resets brightness level to full.

5. Saturation/CCT Touch Slider - Increase/Decrease

Increases (right side) or decreases (left side) the color saturation level. When controlling white, adjusts from cool white (right side) to warm white (left side).

6. Mode

Modes feature different color combinations, light transitions, and patterns. This button initiates mode function and scrolls through modes in ascending order.

7. Mode Speed Increase/Decrease

Increases (S+ or +Speed) or decreases (S- or -Speed) speed of currently active mode.

8. Zones 1-8 On (I)/Off (O)

Allows up to eight zones (channels) of RGBW and/or RGB+CCT lights to be separately linked and controlled by remote. Pressing any Zone On(I) button activates that zone. Commands will affect only lights in that zone. Once linked to a zone, lights remain linked until they are unlinked.

9. White LED Selection

Switches to white LED operation.