

Important: Read all instructions prior to installation.

Emergency Battery Backup Driver Test Remote


Included Parts

- (1) EM01R Test Remote
- (1) Wall Mount Remote Holder

Specifications

Model	EM01R
Battery	2xAAA 1.5V (sold separately)
Range	~15m (50ft)
Dimensions	5.6x1.5x0.6in. (143x39x15mm)
Operating Temperature	-0 to 50°C (-32 to 122°F)

Holder Dimensions

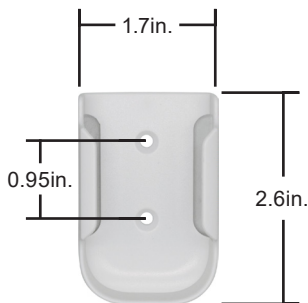

Test Button & LED Indicator

Modes	Test Button Operation	Remote Operation	Indicator Status	Working Status
Normal	Press Test Button	Press Button A	OFF	Emergency Mode
	/	Press Button B	OFF	Monthly Testing
	/	Press Button C	OFF	Annual Testing
	/	/	ON	Charging/Fully Charged Battery
	Press Test Button 5x in 5s	Press Button D	3 FLASHES	Bluetooth reset
Emergency	Press Test Button 5s	/	OFF	Turn off battery pack
Malfunction	/	/	FLASHING	<ul style="list-style-type: none"> • Disconnected or broken battery • Disconnected load • Short circuit or open circuit • Incorrect wire connection

Note: Bluetooth EM LED indicator light is 'breathing' after power on EM has already been connected by another user and was not disconnected correctly. Press remote test button D five (5) times within five (5) seconds to reset the EM Bluetooth connection.